




# DRY BAG 3-ROLL CLOSURE, VERTICAL ORIENTATION


## Stuff goes here!

Leave enough space to roll your bag closed.

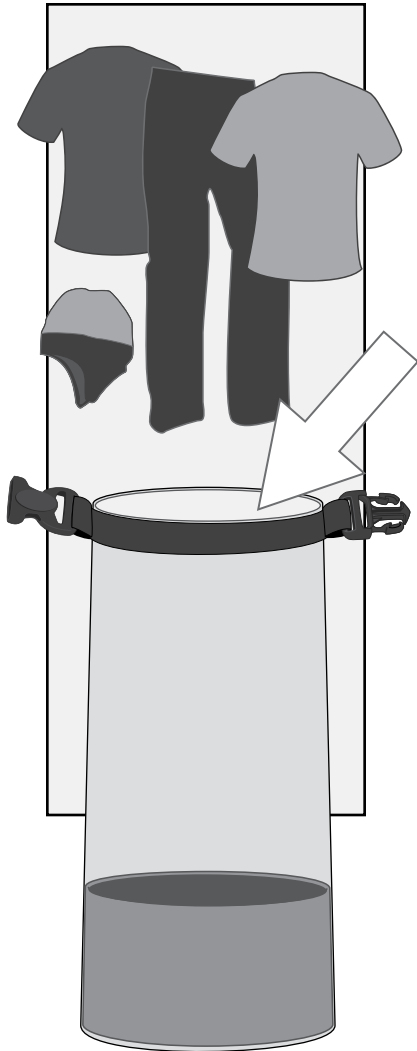


## Roll it over!

Fold the top over once where the buckles create an edge. Squeeze any extra air out of the bag.

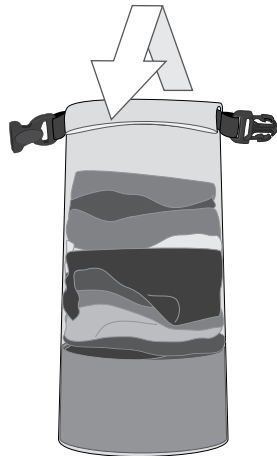

## Roll it Up!

Maintaining the single fold, continue to roll closed a minimum of 3 times.

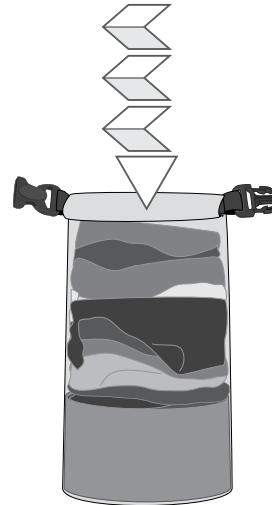

## Buckle!

Bring the ends together and buckle it up.



## WARNING

This bag is not suitable for protection from submersion. Items such as optical, electrical, or photographic equipment can be permanently damaged by submersion. All dry bags are designed to provide enhanced protection form rain and temporary contact with water.

Dry bags are superior protection, but are not intended for long term submersion. The user of this bag understands this warning and acknowledges that any damage to gear resulting from use of this dry bag is not deemed to be the responsibility of the Seattle Sports Company or the retailer selling this dry bag.

## GUARANTEE

Seattle Sports Products are guaranteed for material and workmanship for one year. This warranty is only applicable if all instructions are followed and product is used as recommended.

Normal wear and tear or damage resulting from misuse, accidents or alterations are not covered. Use of this product in a Professional setting is not covered. Seattle Sports assumes no liability for incidental damages or injury resulting from use or misuse of this product. You may have additional warranties or limitations outlined in product packaging.

Thank you for purchasing our products. Please contact us with any questions or concerns about our products. Seattle Sports Company, 3217 W. Smith St #1, Seattle WA 98199. [seattlesportsco.com](http://seattlesportsco.com)